JBJChillers.com
CHILLERS · PARTS · SUPPORT

REPAIR GUIDE

JBJ ARCTICA

Controller Replacement

Digital controller swap, step by step

DB-C-3P

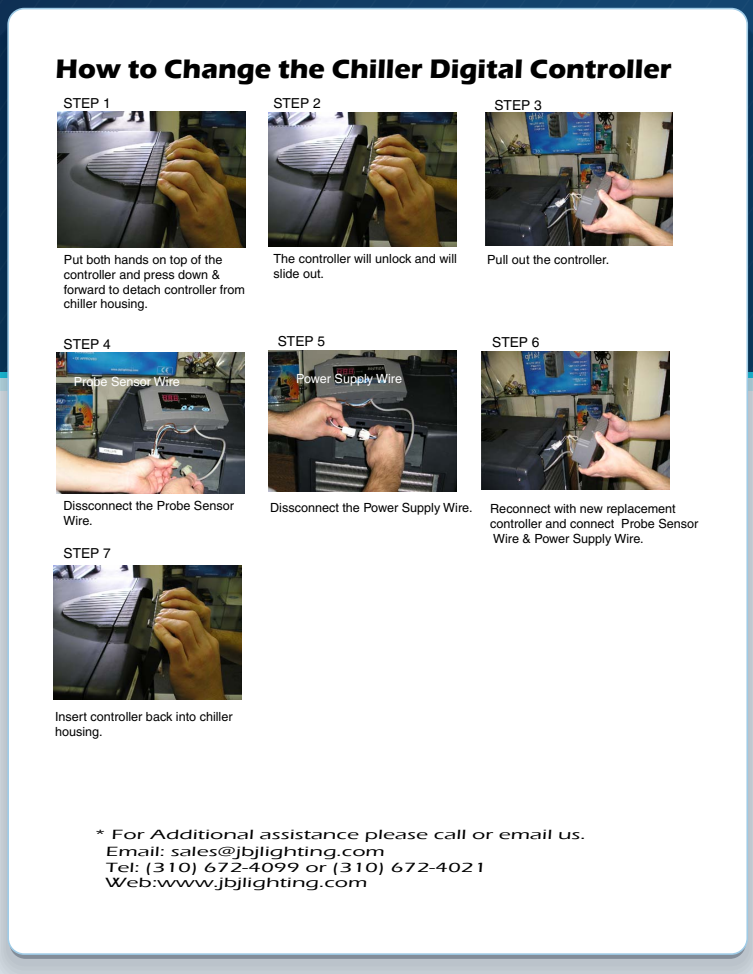

Original JBJ document inside, unchanged

Questions about this model?

Text us 916-800-COLD (2653)

Parts checker | **Size calculator**

Details by email: Jbjnanocubes@gmail.com

Arctica digital controller ›

1
original JBJ page, unchanged

1 tap
to text us from any page

Every page
links back to parts & help

How to Change the Chiller Digital Controller

STEP 1

Put both hands on top of the controller and press down & forward to detach controller from chiller housing.

STEP 2

The controller will unlock and will slide out.

STEP 3

Pull out the controller.

STEP 4

Dissconnect the Probe Sensor Wire.

STEP 5

Dissconnect the Power Supply Wire.

STEP 6

Reconnect with new replacement controller and connect Probe Sensor Wire & Power Supply Wire.

STEP 7

Insert controller back into chiller housing.

* For Additional assistance please call or email us.
Email: sales@jbjlighting.com
Tel: (310) 672-4099 or (310) 672-4021
Web:www.jbjlighting.com

JBJChillers.com
CHILLERS · PARTS · SUPPORT

Keep your Arctica running cold.

Genuine JBJ parts, the chiller size calculator, and help by text or email.

Need parts?

Pick your chiller and see which fan, probe, controller, fuse or cord fits it.

Open parts checker

Size a chiller

Enter your tank size and temperatures. The calculator shows which HP fits.

Open size calculator

Text us

Send the model number or a photo of the label. 916-800-COLD (2653).

Text 916-800-COLD

MORE FROM JBJCHILLERS.COM

All manuals & guides › | Get help › | Replacement parts › | Arctica digital controller ›

Text first for the fastest answer. Details by email: Jbjnanocubes@gmail.com

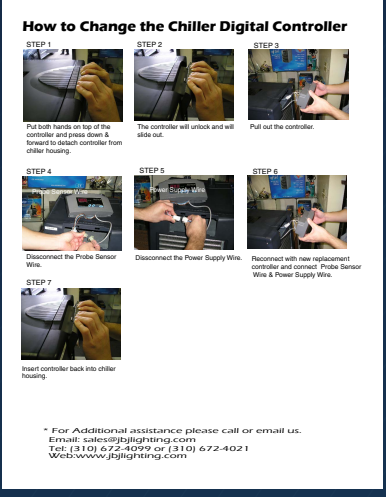
How to Change the Chiller Digital Controller

STEP 1
Put both hands on top of the controller and press down & forward to detach controller from chiller housing.

STEP 2
The controller will unlock and will slide out.

STEP 3
Pull out the controller.

STEP 4
Disconnect the Probe Sensor Wire.

STEP 5
Disconnect the Power Supply Wire.

STEP 6
Reconnect with new replacement controller and connect Probe Sensor Wire & Power Supply Wire.

STEP 7
Insert controller back into chiller housing.

* For Additional assistance please call or email us.
Email: sales@jbjlighting.com
Tel: (310) 672-4099 or (310) 672-4021
Web:www.jbjlighting.com

YOU ARE READING

JBJ Arctica Chiller Digital Controller Replacement Guide

The newest copy of this PDF and every other JBJ manual:

Manuals & guides page ›