JBJChillers.com
CHILLERS · PARTS · SUPPORT

REPAIR GUIDE

JBJ ARCTICA

Fuse Replacement

Find and change the fuse

10A 15A 16A

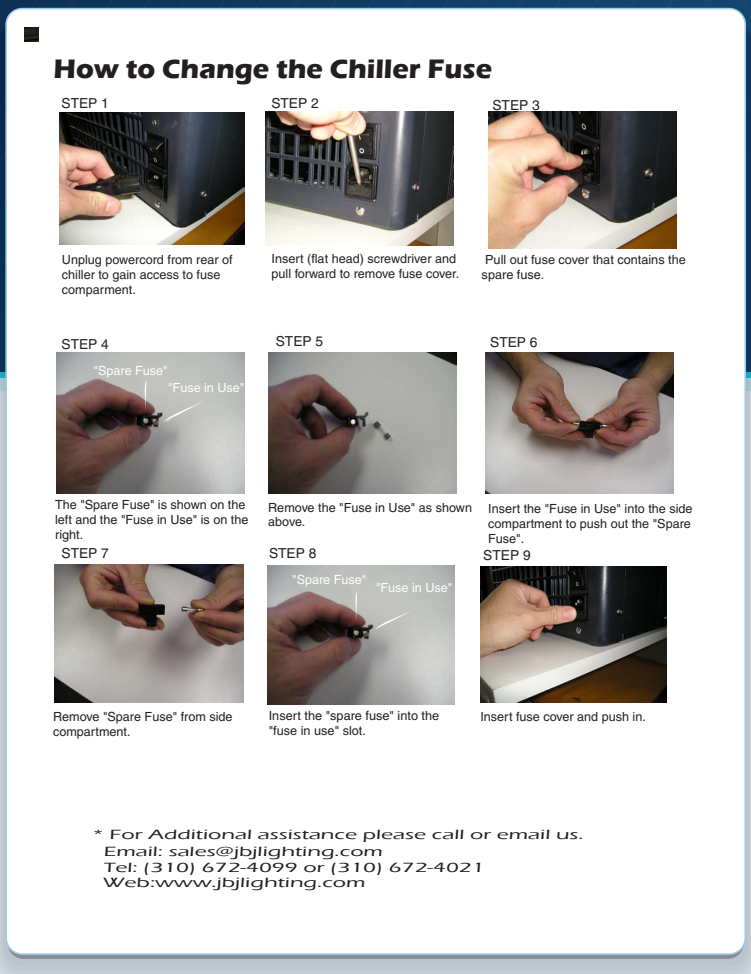

How to Change the Chiller Fuse

STEP 1

Unplug powercord from rear of chiller to gain access to fuse comparment.

STEP 2

Insert (flat head) screwdriver and pull forward to remove fuse cover.

STEP 3

Pull out fuse cover that contains the spare fuse.

STEP 4

The "Spare Fuse" is shown on the left and the "Fuse in Use" is on the right.

STEP 5

Remove the "Fuse in Use" as shown above.

STEP 6

Insert the "Fuse in Use" into the side compartment to push out the "Spare Fuse".

STEP 7

Remove "Spare Fuse" from side compartment.

STEP 8

Insert the "spare fuse" into the "fuse in use" slot.

STEP 9

Insert fuse cover and push in.

* For Additional assistance please call or email us.
Email: sales@jbjlighting.com
Tel: (310) 672-4099 or (310) 672-4021
Web:www.jbjlighting.com

Original JBJ document inside, unchanged

Questions about this model?

Text us 916-800-COLD (2653)

Parts checker **Size calculator**

Details by email: Jbjnanocubes@gmail.com

Replacement fuse cap ›

1
original JBJ page, unchanged

1 tap
to text us from any page

Every page
links back to parts & help

How to Change the Chiller Fuse

STEP 1

Unplug powercord from rear of chiller to gain access to fuse comparment.

STEP 2

Insert (flat head) screwdriver and pull forward to remove fuse cover.

STEP 3

Pull out fuse cover that contains the spare fuse.

STEP 4

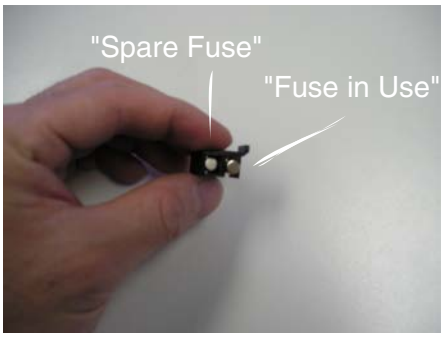

The "Spare Fuse" is shown on the left and the "Fuse in Use" is on the right.

STEP 5

Remove the "Fuse in Use" as shown above.

STEP 6

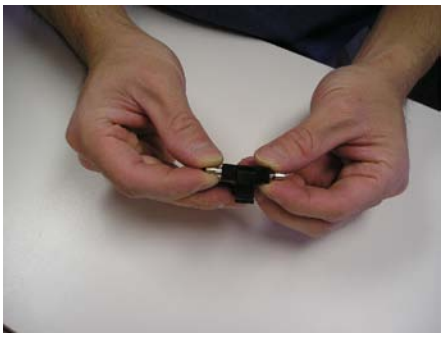

Insert the "Fuse in Use" into the side compartment to push out the "Spare Fuse".

STEP 7

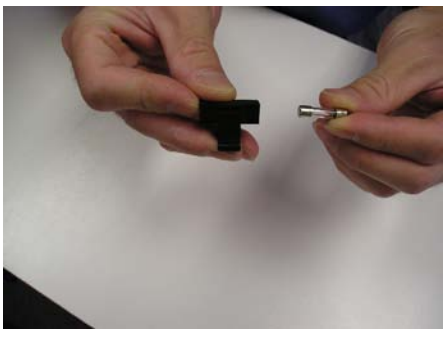

Remove "Spare Fuse" from side compartment.

STEP 8

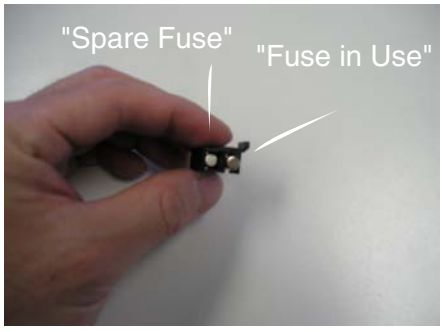

Insert the "spare fuse" into the "fuse in use" slot.

STEP 9

Insert fuse cover and push in.

* For Additional assistance please call or email us.
Email: sales@jbjlighting.com
Tel: (310) 672-4099 or (310) 672-4021
Web:www.jbjlighting.com

JBJChillers.com
CHILLERS · PARTS · SUPPORT

Keep your Arctica running cold.

Genuine JBJ parts, the chiller size calculator, and help by text or email.

Need parts?

Pick your chiller and see which fan, probe, controller, fuse or cord fits it.

Open parts checker

Size a chiller

Enter your tank size and temperatures. The calculator shows which HP fits.

Open size calculator

Text us

Send the model number or a photo of the label. 916-800-COLD (2653).

Text 916-800-COLD

MORE FROM JBJCHILLERS.COM

All manuals & guides › | Get help › | Replacement parts › | Replacement fuse cap ›

Text first for the fastest answer. Details by email: Jbjnanocubes@gmail.com

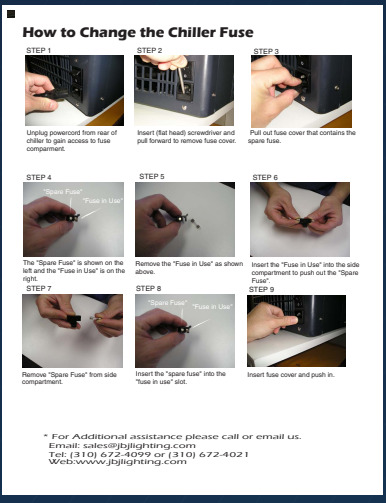
How to Change the Chiller Fuse

STEP 1
Unplug powercord from rear of chiller to gain access to fuse compartment.

STEP 2
Insert (flat head) screwdriver and pull forward to remove fuse cover.

STEP 3
Pull out fuse cover that contains the spare fuse.

STEP 4
"Spare Fuse"
"Fuse in Use"
The "Spare Fuse" is shown on the left and the "Fuse in Use" is on the right.

STEP 5
Remove the "Fuse in Use" as shown above.

STEP 6
Insert the "Fuse in Use" into the side compartment to push out the "Spare Fuse".

STEP 7
Remove "Spare Fuse" from side compartment.

STEP 8
"Spare Fuse"
"Fuse in Use"
Insert the "spare fuse" into the "fuse in use" slot.

STEP 9
Insert fuse cover and push in.

* For Additional assistance please call or email us.
Email: sales@jbjlighting.com
Tel: (310) 672-4099 or (310) 672-4021
Web:www.jbjlighting.com

YOU ARE READING

JBJ Arctica Chiller Fuse Replacement Guide (10A, 15A, 16A)

The newest copy of this PDF and every other JBJ manual:

Manuals & guides page ›